



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG TX-R3265. You'll find the answers to all your questions on the SAMSUNG TX-R3265 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG TX-R3265
User guide SAMSUNG TX-R3265
Operating instructions SAMSUNG TX-R3265
Instructions for use SAMSUNG TX-R3265
Instruction manual SAMSUNG TX-R3265

SAMSUNG

TX-R2764
TX-R2765
TX-R3264
TX-R3065W
TX-R3265

COLOR TELEVISION



1-800-SAMSUNG (1-800-726-7864)

Samsung Electronics America
Service Division
400 Valley Road, Suite 201
Mount Arlington, NJ 07856
www.samsung.com

Samsung Electronics Canada Inc.
Samsung Customer Care
7037 Financial Drive
Mississauga, Ontario
L5N 6R3
www.samsung.ca

**Owner's
Instructions**

AA68-03447B-00

Register your product at www.samsung.com/global/register



[Your user manual](#)
[SAMSUNG TX-R3265](#)

Manual abstract:

29 Using the Channel Buttons 29 Using the Number Buttons 29 Using the PRE-CH Button to Select the Previous Channel . 29 Labeling the Channels . 30 Setting the Clock . 31 Option 1: Setting the Clock Manually 31 Option 2: Setting the Clock Automatically 32 English - 3 CONTENTS Chapter 3: Operation (Cont.) 34 Picture Control 34 Using Automatic Picture Settings . 34 Customizing the Picture 35 Sound Control 35 Adjusting the Volume 36 Using the Mute Button . 36 Using Automatic Sound Settings 37 Customizing the Sound . 38 Viewing an External Signal Source . 39 Setting the Signal Source 39 Assigning Names to External input mode . 40 Chapter 4: Special Features .

41 Fine Tuning Channels . 41 Changing the Color Tone 42 Changing the Screen Size 43 Digital Noise Reduction . 44 Tilt . 45 Using the R.Surf Feature . 46 Freezing the Picture 46 Choosing a Multi-Channel Sound (MTS) track 47 Auto Volume 48 Setting the Surround 49 Setting the Turbo Sound . 50 Setting the On/Off Timer . 51 Setting the Sleep Timer 52 Setting the Preferred Volume Level and Channel . 53 Viewing Closed Captions 54 Setting The On/Off Melody . 55 Using the V-Chip .

56 How to Change Your Password . 56 How to Enable/Disable the Rating Controls 57 How to Set up Restrictions Using the "TV Parental Guidelines" 58 How to Set up Restrictions using the Movie Ratings: G, PG, PG-13, R, NC-17, X . 59 Important Notes About Parental Locks 60 How to Set up Restrictions Using the "Canadian English" . 61 How to Set up Restrictions Using the "Canadian French" . 62 How to Reset the TV after the V-Chip Blocks ("Emergency Escape") 63 Customizing Your Remote Control . 64 Chapter 5: Troubleshooting . 66 Identifying Problems 66 Appendix 67 Cleaning and Maintaining Your TV . 67 Using Your TV in Another Country . 67 Specifications . 67 English - 4 Y p e r V C h a O U R t N E W T O n e YOUR NEW TV List of Features Your TV is designed with the latest technology.

This TV is a high-performance unit that includes the following special features: · Full Flat Screen · Automatic timer to turn the TV on and off · Adjustable picture and sound settings that can be stored in the TV's memory · Automatic channel tuning for up to 181 channels · A special filter to reduce or eliminate reception problems · A built-in multi-channel sound decoder for stereo and bilingual listening · Built-in, dual channel speakers · A special sleep timer · V-Chip function Accessories Once you have unpacked your TV, check to make sure that you have all the parts shown here. If any piece is missing or broken, call your dealer. Remote Control(AA59-00322B)/ AAA Batteries Owner's Instructions/ Safety Guide Manual Warranty Card/ Registration Card English - 5 YOUR NEW TV Familiarizing Yourself with The TV Control Buttons You can control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control. TX-R2764/TX-R3264 TX-R2765/TX-R3065W/TX-R3265 OE TV/VIDEO(TX-R2676/TX-R3276) & SOURCE(TX-R2765/TX-R3065W/TX-R3265) Press to change between viewing TV programs and signals from other components. ^ Remote Control Sensor Aim the remote control towards this spot on the TV. ' MENU Press to see an on-screen menu of your TV's features. Ø TIMER indicator When the TV is turned on, the TIMER indicator blinks five times. This indicator illuminates when the TIMER mode is set to the "On" position after setting the clock and either the On timer or Off timer, with the remote control..



[Your user manual](#)
[SAMSUNG TX-R3265](#)